 




輕觸式電陶爐 2000W
TOUCH CONTROL CERAMIC COOKER 2000W

使用說明書
Instruction Manual

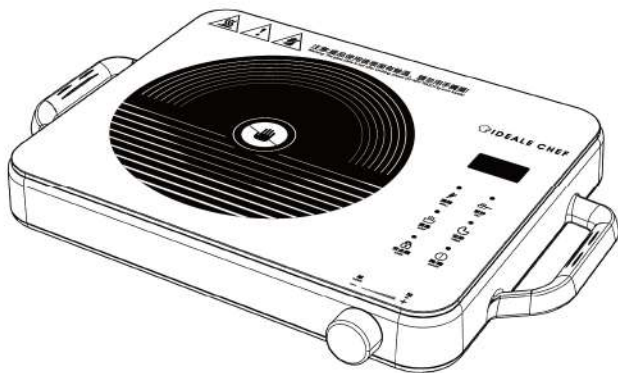

Model No.: ICC560003

產品規格和外觀設計如有更改，恕不另行通知。
Product specification and design are subject to
change without prior notice.

安全預防措施

當使用本產品時，請遵循以下的基本的安全指引，使用前請先閱讀本說明書：

使用前請先閱讀本說明書：

1. 本產品只供家居使用，不可戶外使用。
2. 從插座拔下插頭前，先把本產品轉為“關閉”模式。請勿用拉扯電源線方式來拔下插頭，應抓住插頭並從插座除下，不可直接強行從插座拉下插頭。必須先用手抓緊插頭，之後才從插座拔下。
3. 請勿讓電線接觸熱表面。拆卸和清潔前，必須先讓產品完全冷卻。
4. 不使用本產品時，請務必把電源插頭從電源插座拔出。
5. 請勿用損壞的電源線或產品有任何損壞的情況下操作本產品。為避免觸電，請勿拆卸和重新組裝。如有任何損壞，請親攜到本公司維修部處理。擅自修理/改裝或產品用於非產品原本設計的用途，保修恕不提供。
6. 不可讓兒童單獨使用本產品。
7. 使用中或剛使用後，觸摸熱金屬部件或任何高溫部份可能會被燒傷。
8. 切勿在產品工作時接觸到它的內部。
9. 本產品不能外接定時器或搖控器。
10. 首次使用本產品時，可能會產生輕微的異味或白煙，只要把本產品放在通風處，異味和白煙很快便會消散。

特別聲明:

1. 為避免電路負荷過重，請勿在同一電路上操作另一件電器。
2. 如果延長線有必要使用，應使用13安培的電線。額定電流比此產品較小的電線可能引起過熱和短路。
3. 請保留此說明書以備將來作參考。
4. 本產品不適合由肢體不健全、感官或精神上有障礙或缺乏相關經驗和知識的人(包括兒童)使用，除非有負責他們安全的人對他們使用本產品進行監督或指導。
5. 照顧好兒童，以確保他們不玩弄本產品。
6. 請勿把本產品、電源線或插頭浸入任何液體中，否則可能導致觸電或火災。如要清潔此產品，請按照說明書上的清潔部份。
7. 當產品無需使用時，請斷開插頭與電源的連接。
8. 請勿用濕手觸摸本產品。
9. 請勿把產品暴露在戶外(雨或陽光底下)。
10. 當插頭插入插座並開啟後，請確保有合資格的人員監督下方可使用本產品。
11. 在使用本產品前，請移除所有包裝物料。
12. 拆開包裝後，檢查是否有損壞，有沒有丟失零件。
13. 所有包裝物料，如塑膠袋、發泡膠、膠帶等都應放在兒童接觸不到的地方，因為此等物料不正當使用會引致兒童窒息，甚至死亡。
14. 只能使用本公司提供在產品和包裝內的配件，否則可能對用戶構成危險，並有可能損壞產品。
15. 使用本產品前，請檢查產品銘牌上標明的電源和電壓是否符合。銘牌貼在產品背面。如有任何疑問，請查詢本公司客戶服務部尋求協助。
16. 請勿讓電源線接觸鋒利的邊緣或熱表面。
17. 本產品不是玩具，不可用在人和動物身上。
18. 本產品不可用在不穩定的地點或燃燒的物體上使用，否則容易引起火災或被燒傷。

19. **零件和配件不包括在保修範圍內**，如客人需更換，必須另行跟本公司購買。零件不一定現有，有可能需等待若干時間才能更換。
20. 本產品只限於家居使用，不可作任何商業用途。
21. **如產品須維修，客人必須自行清潔乾淨和殺死所有的昆蟲**，否則本公司須收取額外的清潔和滅蟲費用。
22. 首次使用本產品時，由於該絕緣材料可能有氣味或有煙，這是無害的，很快就會消退。
23. 使用中如出現異常雜音、氣味、煙霧等現象，應立即切斷電源。如有任何疑問，請向本公司客戶服務部尋求協助。
24. 如果電源線損壞，必須由製造商、其服務代理或合資格人員更換，以避免發生危險。

本說明書可於以下網站查閱或下載，以獲取相關指引。

請參閱網址：

<https://sites.google.com/view/idealechefhk/instruction-guide>

安全注意事項

1. 將機體放在水平面上，底部距離水平面的最小距離為13厘米，而出風口與牆壁間隙大於13厘米。
2. 請不要用水直接沖洗/淋濕機體，以免機件損壞或漏電。
3. 遠離高溫發熱器具，避免環境溫度過高，影響此產品運作。
4. 請不要把電陶爐放在易燃物品、電爐或金屬檯面等物品上使用。
5. 請不要在浴室、煤氣爐等受潮或靠近易燃易爆物品的地方使用電陶爐。
6. 請勿以紙張、布等物品墊在面板上間接加熱，以免鍋底溫度過高引致燃燒。
7. 請勿加熱罐頭等密封容器盛裝的食品，否則會因容器內受熱膨脹，而引致爆炸。
8. 請勿以錫紙直接或間接加熱的方式使用，為免將錫紙燒紅，而引致危險。
9. 請不要讓鍋具於電陶爐上乾燒。

10. 如需要將密封食物加熱，要先打開包裝後才開始工作。
11. 請勿將易燃或金屬物品放在面板與鍋具之間。
12. 電陶爐的黑晶板的承重是有限的(建議不超過5kg)，不要放太重的東西在黑晶板上，否則會導致損壞塑料面蓋及黑晶板。
13. 每次使用本電陶爐後，請拔下電源插頭。
14. 使用後面板仍很熱，請勿觸摸。如需清潔，請先等候散熱約1小時。
15. 請勿將任何異物插/放入機體內，以免機件故障。
16. 請勿在地毯或檯布上使用電陶爐，以免阻塞進風口或出氣口，影響散熱。
17. 請勿讓兒童單獨操作此電陶爐，請將電陶爐放置於嬰兒、兒童不能接觸的地方。
18. 請勿碰撞黑晶板或用鋒利器具接觸黑晶板，以免黑晶板裂開等損壞；如果該表面有裂紋，關掉電陶爐以避免可能出現的電擊。
19. 若面板破裂，請立即切斷電源，並聯絡本司客戶服務中心查詢維修事宜。
20. 機器在使用過程中，晶板表面溫度高，金屬物體如刀、叉子、勺子和蓋子等不能放置在產品上，以免受熱。
21. 下列物品請遠離爐面：塑膠、鋁膜、海綿、去污粉及烤箱清潔噴霧等。
22. 基於安全考慮，請勿於高溫環境下使用爐具。
23. 切勿在使用過程中外出或睡覺，使用後應關閉電源。
24. 除烹調外不得用於烘乾衣服、引燃煤餅、取暖等其他用途。
25.  請注意使用後表面有餘溫!

安全保護

1. 過熱保護:如面板溫度超過700°C ($\pm 50^\circ\text{C}$)以上,本產品會自動停止運作。
2. 內部超溫保護:當產品內部溫度超過100°C-130°C,本機會自動停止運作。
3. 高低壓保護:如果電壓低於85V ($\pm 10\text{V}$)或高於285V ($\pm 10\text{V}$),該產品將會自動停止工作。
4. 無人看管自動關機功能:如果連續約2小時(120分鐘)未進行任何操作,本電陶爐將自動關機。
5. 如進入待機模式後約30秒內沒有任何操作,本機將會自動進入待機模式。
6. 注意:本產品開機並在設定你要煮食的模式後,當溫度達到預設值時,紅色發熱圈便會自動關閉,幾秒後溫度便會低於預設值,紅色發熱圈亦會自動開啟點亮。本機會自動循環開關加熱,以達至最安全效果。

清潔及保養


1. 在清潔和維護之前,請確保產品已拔下電源並且產品已完全冷卻。
2. 清理面板
輕微污垢:請用柔軟的已擰乾的抹布擦拭。
 - 避免機身變形或破裂,切勿使用揮發性、稀釋劑及液體清潔劑清洗。
 - 含化學物質的布料可能會令機身變色。
 - 請不要將此產品放入洗碗碟機/乾碗碟機。
3. 清除油污
 - 以柔軟的濕抹布蘸少量牙膏或中性清潔劑清理,再用乾淨的抹布擦拭乾淨。
 - 不可用水沖洗,以免導致觸電損壞。
4. 清理外殼
 - 請用柔軟布擦拭機身。
 - 進風口和出風口的灰塵,可用柔軟的毛刷或吸塵器清理。

5. 確保插頭連接正常
 - 清潔前應先由插座拔出電源插頭，以免觸電。
 - 使用前應先檢查插頭與插座的接觸情況，確保連接正常，以免使用時發生危險。
6. 請勿使用帶有腐蝕性的藥水及堅硬物品對其產品內，外部進行清潔(例如：香蕉、水、汽油、去污粉，硬質刷等)。
7. 電器內部嚴禁進水，請不要將本產品電器部份進入水中清洗。
8. 禁止使用洗碗機或烘碗機進行清洗，以免做成變形或爆炸等危險。

產品各部份描述



控制面板

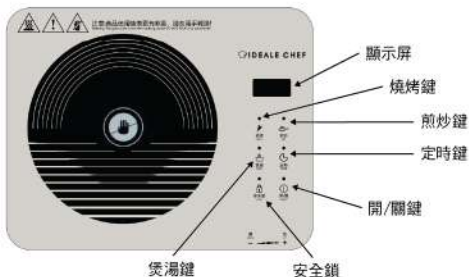

注：圖片僅供參考，產品以實物為準。

使用本產品

1. 開/關

插上電源插頭後，機器會發出“嗶”一聲，顯示屏顯示8888和0001，及所有指示燈全亮約1秒，然後熄滅，代表機器進入通電狀態。按“開/關”鍵一次，顯示屏顯示“-ON-”，代表機器進入待機狀態。

2. 功能選擇

*煎炒

按“煎炒”進入煎炒功能，煎炒指示燈亮，顯示屏顯示[2000]，代表機器預設加熱功率是2000W，可用旋鈕鍵來調節功率，共9個檔位(300W，500W，800W，1000W，1200W，1400W，1600W，1800W，2000W)。如要切換模式，可按其他功能選擇或“開/關”鍵停止機器。

*燒烤

按“燒烤”進入燒烤功能，燒烤指示燈亮，顯示屏顯示[400℃]，代表機器預設加熱溫度是400℃，可用旋鈕鍵來調節溫度，共9個檔位(100℃，200℃，300℃，350℃，400℃，450℃，500℃，550℃，600℃)。如要切換模式，可按其他功能選擇或“開/關”鍵停止機器。

*煲湯

按“煲湯”進入煲湯功能，煲湯指示燈亮，顯示屏顯示[2:00]，代表機器預設時間約2小時，火力不能調節。當進入該功能，“定時”指示燈也同時亮起，時間顯示閃爍時，可用旋鈕鍵來調整關機時間，可調節的時間範圍約1分鐘到3小時；如要切換模式，可按隨意按其他功能選擇或“開/關”鍵停止機器。

3. 旋鈕操作

A)使用旋鈕來調節火力，火力調節共9個檔位(由：300W，500W，800W，1000W，1200W，1400W，1600W，1800W，2000W)。若需要取消，按“開/關”鍵關閉。

B)也可以用旋鈕，來調節“定時”時間；可調節的時間範圍是約1分鐘到3小時。

4. 定時功能

按“定時”鍵進入定時設置，顯示屏顯示預設時間[0:00]，此時

- 向左旋轉：以每1分鐘為單位遞減
- 向右旋轉：以每10分鐘為單位遞增

可設定的時間範圍為約1分鐘至3小時。設定完成後，約5秒鐘系統會自動確認，並開始倒數計時。當倒數歸零時，機器會發出“嗶”一聲，同時顯示“-H-”，並停止運作，進入待機狀態。若要取消定時功能，可再次按下“定時”鍵或“開/關”鍵，即可隨時取消。

5. 安全鎖

在功能模式或待機模式下，用戶可鎖定控制面板以防兒童意外觸碰電陶爐或改變煮食設置。按“安全鎖”鍵，即可鎖住控制面板，“安全鎖”指示燈亮。當安全鎖功能啟動後，除了“開/關”鍵外，任何按鍵及旋鈕都無法操作。如要取消“安全鎖”功能，要長按約3秒“安全鎖”鍵取消及其指示燈熄滅。

6. 關機

使用完畢後，按“開/關”鍵，電陶爐則關機。電陶爐內部溫度較高時，關機後電陶爐內部的排風扇將會持續工作散熱約15-20分鐘後自動停止。當排風扇停止後，便可拔下電源插頭。注意：必須讓電陶爐的面板完全冷卻後才能進行清潔及存放。

技術參數

款號	電壓	功率	頻率
ICC560003	220-240V~	2000W	50-60Hz

故障排除

故障現象	檢查要點	處理方法
連接電源線後，按電源開關鍵，機器無響應	- 檢查插頭是否插緊 - 檢查電源線是否完好 - 檢查電力供應 - 電壓是否太低	檢查後排除原因
在正常運作時產品停止操作	- 環境溫度太高 - 出風口或進風口堵住 - 是否已有2小時未進行操作使用	- 將機器移往溫度較低的環境 - 出風口和進風口保持暢通 - 正常現象 - 若風扇正常轉動，可能機器在自動調整內部溫度，請過一會再試
E1	供電電壓小於85V(±10V)	排除電壓異常原因，再通電可正常使用
E2	供電電壓大於285V(±10V)	
E3	主感測器斷路或短路	請聯繫客戶服務中心檢查及維修
E4	可控硅傳感器斷路或短路	請聯繫客戶服務中心檢查及維修
E5	主感測器超溫	1.檢查鍋具適用與電陶爐及鍋底是否平整 2.檢查是否空鍋乾燒或燒油溫度過高 3.檢查電陶爐通風孔沒有堵塞且排風扇是否工作正常 4.關閉電陶爐讓其散熱，至完全冷卻可再次嘗試使用 5.如果故障反復出現，停止使用並請聯繫客戶服務中心檢查及維修
E6	可控硅傳感器高溫	請聯繫客戶服務中心檢查及維修
E7	爐面感測器故障	請聯繫客戶服務中心檢查及維修
EC	顯示板與主機板通訊錯誤	請聯繫客戶服務中心檢查及維修

備註：為了安全著想，如果電源線插頭損壞，請自行攜帶此產品往我司維修中心維修。

小家電產品保修條款

敏寶有限公司（“本公司”）提供一年保修服務（由有效商戶發票上的購買日期起計算），保修期以後，客戶須按照維修部之修理報價支付一切費用。

- （一）客戶應按照產品使用說明書之指引使用產品，本公司對於任何因產品不適當使用或任何產品之故障，損壞或停頓而引致任何人士或財產上直接或間接損失及破壞概不負責。
- （二）客戶不可擅自刪改產品型號，機身編號或商戶發票內容。如發現者本公司將不向客戶提供保修服務。
- （三）由於人為損壞、錯誤使用，疏忽，擅自修理/改裝或產品用於非產品原本設計之用途，保修服務恕不提供。
- （四）本公司提供之保修服務不包括產品表面、機身、損耗性零件及配件。
- （五）客戶需自行將產品送往本公司之維修部，並於修妥後，於同一地點取回。經更換後之任何損壞零件，將歸本公司所有。
- （六）所有交到維修部之物品，在本公司發出通知取回後30天內仍不領回本公司將有權作出處理，由此所引致之任何損失，本公司概不負責。
- （七）保修條款如有任何更改，恕不另行通知。如有任何爭議，本公司保留最終決定權。

Important Safety Instructions

When using this appliance, basic precautions should always be followed, including the following:

Read all instructions before use.

1. This product is only for home use, not for outdoor.
2. Remove the product from the outlet to the "off" mode before unplugging the plug from the outlet. Do not use the way to pull the power cord to unplug the plug, should be hold the plug and remove it from the socket. Do not pull down the plug directly from the socket by pressing the rewinding system directly. Remove the plug from the socket by hand and then retract the wire.
3. Do not allow the wires to touch the hot surface. Before removing and cleaning, the product must be completely cooled.
4. When not in use, be sure to unplug the power plug from the power outlet.
5. Do not operate this product with any damage to the power cord. In order to avoid electric shock, do not disassemble and reassemble. If any damage, please carry it to our maintenance centre. Unauthorized repair / modification or product for non-product design purposes, warranty will not provide.
6. Do not allow children to use this product separately.
7. Touch hot metal parts or steam may burn.
8. Do not touch the inside of the product while it is working.
9. This product cannot be connected to a external timer or remote control.
10. When first time to use this appliance, a slightly smell and white smoke may be emitted. It is normal status. Please ensure sufficient ventilation, those smell and white smoke will disappear quickly.

Special Statement

1. To avoid overloading the circuit, do not operate the other on the same circuit.
2. If the extension cord is necessary, use a 13 amp cable. A smaller current than this product may cause overheating and short circuit.
3. Please keep this manual for future reference.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Children should be supervised to ensure that they do not play with the appliance.
6. Do not immerse the product, power cord, or plug in any liquid. Doing so may cause electric shock or fire. To clean the product, follow the Clean & Maintenance section on the instructions.
7. When the product is not in use, disconnect the plug from the power supply.
8. Do not touch the product with wet hands.
9. Do not expose the product to outdoor (rain or under the sun).
10. After inserting the plug into the socket and opening it, make sure that the qualified personnel supervise the use of the product.
11. Before using this product, remove all packaging materials.
12. After unpacking, check for damage and there are no missing parts.
13. All packaging materials, such as plastic bags, polyfoam, tape, etc. should be placed in places where children are not exposed, because improper use of these materials will lead to child suffocation, and even death.

14. Use only the parts provided in the product and in the packaging, otherwise it may pose a hazard to the user and may damage the product.
15. Before using the product, please check the product rating label on the power, voltage is consistent. The rating labels attached to the back of the product. If you have any questions, please contact our customer service department for assistance.
16. Do not allow the power cord to touch a sharp edge or hot surface. during operation.
17. This product is not a toy, cannot be used directly into the people and animals.
18. This product cannot be used in unstable locations or burning objects, otherwise it is likely to cause a fire or burn.
19. **Parts are not included in the warranty.** if you need to be replaced, must be purchased with my company. Parts are not necessarily available; it may take some time to replace.
20. This product is for home use only, not for any commercial purposes.
21. **If the product needs to be repaired, client must clean the product and kill all the insects before sent to our repair centre.** otherwise our company will charge extra cost for cleaning and pest control.
22. You may notice an odour & gas using the appliance for the first time, due to the insulation material. This is harmless and will subside quickly.
23. If abnormal noise, smell, smoke occur during use, the power supply should be off immediately. If you have any questions, please ask our customer service department for assistance.
24. If the supply cord is damaged, it must be replaced by manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This instruction manual is available for viewing or download from below website to access the relevant guidelines.

Please refer to the website address:

<https://sites.google.com/view/idealechefhk/instruction-guide>

Safety Notes

1. Place the body on a horizontal plane, the minimum distance between the bottom and the horizontal plane is 13 cm, and the gap between the air outlet and the wall is greater than 13 cm.
2. Please do not directly wash/wet the body with water to avoid damage to the machine or electric leakage.
3. Keep away from high-temperature heating appliances to avoid excessively high ambient temperature, which may affect the operation of this product.
4. Please do not use the ceramic cooker on flammable materials, electric stoves or metal countertops.
5. Please do not use the ceramic cooker in the bathroom, gas stove, etc. where it is damp or near flammable and explosive materials.
6. Do not use paper, cloth and other items on the panel to indirectly heat, so as to avoid excessive heat at the bottom of the pot and cause burning.
7. Do not heat the food in sealed containers such as cans, otherwise it will explode due to heat expansion in the container.
8. Do not use the tin paper directly or indirectly to heat it, in order to avoid burning the tin paper red, which may cause danger.
9. Please do not let the pots and utensils dry on the ceramic cooker.
10. If you need to heat the sealed food, you must open the package before starting to work.

11. Do not put flammable or metal objects between the panel and the pot.
12. The load-bearing capacity of the glass plate of the ceramic cooker is limited, do not put too heavy objects (not over 5kg) on the glass plate, otherwise it will cause damage to the plastic cover and the glass plate.
13. After each use of the ceramic cooker, please unplug the power plug.
14. After use, there will be residual heat in the panel, please do not touch it. For cleaning, please wait for approx. 1 hour to dissipate heat.
15. Do not insert/put any foreign objects into the machine to avoid malfunction of the machine.
16. Do not use the ceramic cooker on the carpet or tablecloth, so as not to block the air inlet or outlet and affect heat dissipation.
17. Do not allow children to operate this ceramic cooker alone, please place the ceramic cooker out of the reach of infants and children.
18. Do not hit the glass plate with objects or touch the glass plate with sharp tools to avoid damage such as cracking of the glass plate; if there is a crack on the surface, turn off the ceramic cooker to avoid possible electric shock.
19. If the panel is cracked, please cut off the power immediately and contact our customer service center for maintenance.
20. The temperature of accessible surface will be high when the appliance is operating. Metallic objects such as knives, fork, spoons and lid etc not to be placed on the hotplate since they can get hot.
21. Please keep the following items away from the surface: plastic, aluminum, sponge, cleaner and oven cleaning spray etc.

22. For safety, do not use the unit in an environment with high ambient temperature
23. Do not get out or sleep when using the unit. Please turn off the power after using.
24. Except for cooking, do not use the cooker for drying clothes, burning coal, warming oneself and other purpose.
25.  Caution, HOT surface after using!


Safety Protection

1. Over heat protection: If the temperature of panel exceeds 700°C ($\pm 50^\circ\text{C}$), the units will stop automatically.
2. Inner temperature overheat protection: When the inner temperature reaches 100°C-130°C, it will automatically stop.
3. Low voltage and over-voltage protection: If the voltage is below 85V (+/-10V) or over 285V (+/-10V), the units will stop working automatically.
4. 2 hours auto shutdown function: The unit will automatically shut down if no operation is performed for approx. 2 hours (120 minutes).
5. The unit will automatically enter standby mode if no operation is performed for approximately 30 seconds.
6. Note: After the appliance is switched on and a cooking mode is selected, the heating ring will automatically switch off when the temperature reaches the preset level. After a few seconds, when the temperature drops below the preset level, the heating ring will switch on again. The appliance will cycle heating on and off automatically to ensure safe operation.


Clean & Maintenance

1. Before cleaning and maintenance, make sure the product has unplugged and the product has been completely cooled.
2. Clean the plate and control panel
Slight dirt: Wipe with a wrung out soft cloth.
 - To avoid deformation or cracking, do not use benzine, thinner or liquid cleaners.
 - Chemical cloth may cause the change in color or the unit.
 - Do not wash this unit by dishwasher or dish dryer.
3. Clean oil stain
 - Clean by the cloth with little tooth paste or neuter detergent, then wipe the unit again with clean dry cloth.
 - Do not wash by water directly to avoid electric shock and damaged.
4. Clean the body
 - Use clean dry cloth for cleaning the body.
 - Clear the dust in the air inlet and outlet by soft brush or vacuum cleaner.
5. Check the power cord and socket
 - Unplug this unit before cleaning.
 - Check the connection between power cord and socket before use for safety.
6. Do not use corrosive potions and hard objects to clean the inside and outside of the product (for example: banana water, gasoline, decontamination powder, hard brush, etc.)
7. Do not enter the water inside the appliance. Cannot fill in the electric part of ceramic cooker inside the water.
8. It is forbidden to use a dishwasher or a dish dryer for cleaning, so as to avoid the danger of deformation or explosion.

Parts

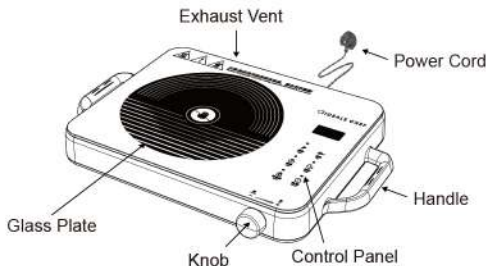

Control Panel

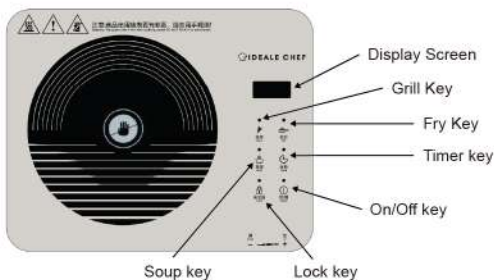

Note: The picture is for reference only. The product is subject to the actual product.

Instructions For Use

1. On/Off:

After inserting the plug into the socket, the appliance will emit a "beep". The display will show "8888" and "0001", and all indicators will light up for approx. 1 second before turning off, indicating that the appliance is powered on. Press the "On/Off" key once; the display will show "-ON-", indicating that the appliance is in standby mode.

2. Function Selection:

*Fry

Press "Fry" to enter the fry function. The fry indicator lights up, and the display shows [2000], representing the preset heating power of 2000W. Use the rotary knob to adjust the power level. There are 9 levels (300W, 500W, 800W, 1000W, 1200W, 1400W, 1600W, 1800W, 2000W). To switch modes, press another function key or press "On/Off" to stop the appliance.

*Grill

Press "Grill" to enter the grill function. The grill indicator lights up, and the display shows [400°C], representing the preset heating temperature of 400°C. Use the rotary knob to adjust the temperature. There are 9 levels (100°C, 200°C, 300°C, 350°C, 400°C, 450°C, 500°C, 550°C, 600°C). To switch modes, press another function key or press "On/Off" to stop the appliance.

*Soup

Press "Soup" to enter the soup function. The soup indicator lights up, and the display shows [2:00], representing a preset cooking time of approximately 2 hours. The power level is not adjustable. When this function is activated, the "Timer" indicator also lights up. While the time display is flashing, use the rotary knob to adjust the shutdown time. The adjustable time range is from approx. 1 minute to 3 hours. To switch modes, press any other function key or press "On/Off" to stop the appliance.

3. Knob operation:

- A) Use the rotary knob to adjust the power level. There are 9 power levels (300W, 500W, 800W, 1000W, 1200W, 1400W, 1600W, 1800W, 2000W). To cancel, press the "On/Off" key.
- B) The rotary knob can also be used to adjust the "Timer" setting. The adjustable time range is from approx. 1 minute to 3 hours.

4. Timer function:

Press the "Timer" key to enter the timer setting. The display shows the default time [0:00]. At this point, use the rotary knob to set the desired time:

- Turn left: decrease in 1 minute increments
- Turn right: increase in 10 minute increments

The settable time range is from approx. 1 minute to 3 hours. After setting, the system will automatically confirm the setting in approx. 5 seconds and start the countdown. When the countdown reaches zero, the unit will emit a "beep", display "-H-", stop operating, and enter standby mode. To cancel the timer function, press the "Timer" key or the "On/Off" key again at any time.

5. Lock

In any function mode or standby mode, the control panel can be locked to prevent children from accidentally touching the ceramic cooktop or changing cooking settings.

Press the "Lock" key to lock the control panel; the "Lock" indicator lights up. When the safety lock is activated, all keys and the rotary knob are inoperable except for the "On/Off" key. To cancel the "Lock" function, press and hold the "Lock" key for approx. 3 seconds until the indicator goes off.

6. Power Off

After use, press the "On/Off" key to turn off the appliance. If the internal temperature of the appliance remains high, the exhaust fan inside the ceramic cooker will continue running for approx. 15-20 minutes before stopping automatically. Unplug the unit after the fan stops.

Note: The ceramic cooker panel must be allowed to cool completely before cleaning and storage.

Technical Specification

Model	Voltage	Power	Frequency
ICC560003	220-240V~	2000W	50-60Hz

Simple Troubleshooting

Symptoms	Check-up Items	Solution
After plugging in the unit, pressing the "On/Off" key produces no response	• Check the plug if insert tightly • Check the power cord if well • Check the power supply • Check the voltage if too low	Eliminate after inspection
The appliance stops heating during operation	• Ambient temperature is too high • Air inlet or outlet is blocked • Check if there is no operation for 2 hours	• Move the unit to a cooler environment • Ensure that the air inlet and outlet are not blocked • This may be normal • If the fan is operating normally, the appliance may be regulating internal temperature; wait a few minutes and try again
E1	Supply voltage is below than 85V ($\pm 10V$)	After eliminating the cause of voltage abnormality, it can be used normally after
E2	The power supply voltage exceeds 285V ($\pm 10V$)	powering on again

E3	Main sensor open/short circuit	Please contact the customer service center for inspection and repair
E4	Silicon Controlled Rectifier sensor open or short circuit	Please contact the customer service center for inspection and repair
E5	Main sensor over temperature	1. Check whether the pot is suitable for ceramic cookers and whether the bottom of the pot is flat base 2. Check whether the pot is dry heating or overheating oil 3. Check that the ventilation holes of the ceramic cooker are not blocked and that the exhaust fan operates normally 4. Turn off the ceramic cooker and let it dissipate heat. Try to use it again until it is cool completely 5. If the fault occurs repeatedly, stop using and please contact the customer service center for inspection and repair
E6	Silicon Controlled Rectifier sensor over-temperature	Please contact the customer service center for inspection and repair
E7	Cooktop surface sensor failure	Please contact the customer service center for inspection and repair
EC	Communication error between display control board and main board failure	Please contact the customer service center for inspection and repair

Remark: In order to safety, if the power cord have damaged, please send it to service station to repair.

SMALL HOME APPLIANCES WARRANTY TERMS & CONDITIONS

MAIN PLAN LIMITED (hereinafter called "the Company") offers one year warranty service to the product (commencing from the date of purchase invoice by the authorized dealers).

Services beyond the said warranty period will be charged according to the quotation from our Service Department.

1. Customer should follow the operating instruction in operating the product. The Company shall not be liable for any direct or indirect loss or damage to any person or property, howsoever caused arising from improper use, or any stoppage, breakdown or failure of the product.
2. The warranty service will not be offered if the model, serial number of the product or the invoice of the authorized dealers has been altered or effaced.
3. This warranty does not cover any damage or loss caused by man-made, misuse, neglect unauthorized repair / modification or use of the product for any purpose other than the original designed.
4. This warranty service does not include any surface, cabinet, consumptive parts and accessories.
5. Customer should be responsible to carry the product to our Service Department for rendering of service and collect back the product at the same location after repaired. Any defective part which has been replaced should become the property of the Company.
6. All articles left unclaimed by the customer within 30 days after notification will be disposed of at our own discretion and the Company shall not be liable or responsible to the customer for such articles or for any loss or damage whatsoever in such event.
7. All terms stated are subject to change without notice. In case of dispute, the Company reserves the right for final judgment and decision.



顧客服務中心 Customer Service Centre

電話 Telephone : (852) 2698 9280

WhatsApp : (852) 9732 0533
(只接受語音、短片、圖片及文字)
(Voice, video, image and text only)



地址 Address :

香港新界荃灣白田壩街23-29號長豐工業大廈東翼3樓
3/F, Cheung Fung Industrial Building East Wing, 23-29
Pak Tin Par Street, Tsuen Wan, N.T., Hong Kong

辦公時間 Office Hour :

星期一至五 Monday to Friday : 09:00 - 12:30 ; 14:00 - 17:30
星期六、日及公眾假期休息
Saturday, Sunday and public holiday closed
