 




電子廚房磅
KITCHEN SCALE

使用說明書
Instruction Manual

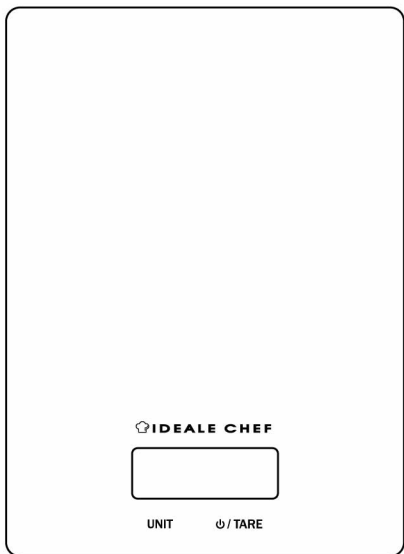

Model No.: IKS005001

產品規格和外觀設計如有更改，恕不另行通知。
Product specification and design are subject to
change without prior notice.

安全預防措施

當使用本產品時，請遵循以下的基本的安全指引，使用前請先閱讀本說明書：

一般安全說明

1. 本設備只供家居使用，不可戶外使用。
2. 僅將設備用於預期用途。
3. 請勿使用已損壞的設備。
4. 遠離熱源、陽光直射、潮濕環境 (切勿浸入液體) 和尖銳邊緣。
5. 請勿嘗試自行維修設備，請務必聯絡授權技術人員。
6. 為確保孩子的安全，請將所有包裝 (塑膠袋、盒子、聚苯乙烯等) 放在他們接觸不到的地方。
7. 應隨時看管兒童，以確保他們不會玩耍本設備。

產品各部份描述

規格

- 容量：5g -5000g
- 分區：1g/0.05oz/1ml
- 液晶顯示屏
- 低電量和過載指示
- 不同單位內自由切換：g/oz/lb:oz/ml/fl:oz
- 由 1 節 CR2032 電池供電

按鍵描述

UNIT  / TARE

"UNIT" 鍵：單位轉換

ON/TARE 鍵：開機、關機和皮重功能

使用本產品

初次使用：拆除所有包裝。

- 按鍵功能：使用單位轉換開關來量重
- 初次使用磅前，請檢查電池盒並移除可能存在的塑膠絕緣條或包裝，以避免電池在運輸或儲存過程中耗電
- 更換電池時，請確保正極和負極觸點正確對齊



 
- 將磅穩定地放在堅硬平坦的表面上
- 按下 ON/TARE 按鈕打開刻度，當 LCD 螢幕顯示「0g」後即可使用
- 按“UNIT” 按鈕，選擇您需要的重量單位



- 將要稱重的容器或其他物品放在磅的平台上，重量就會顯示在屏幕上



- 按 ON/TARE 按鈕清除平台上物品的重量，螢幕將顯示「皮重」和「0g」。然後將食物放入容器中或在平台上添加更多物品，其重量就會顯示在屏幕上



- 繼續使用 ON/TARE 按鈕，您可以通過重複皮重，方便地獲得更多物品的相應重量。當所有物品都從平台上移走時，總重量將顯示在屏幕上



- 稱重完畢後，則當屏幕顯示“0g”時，按 ON/TARE 按鈕關閉磅。如果2分鐘內無操作，磅將自動關閉

錯誤代碼

1. 低 - 電池電量低，請更換電池。



2. EEEE- 超過最大容量。此磅不能用於測量超過 5000 克的測量值。



使用與保養建議

- 請將磅放在堅硬平坦的表面上（最好是乾淨的平板），並確保其穩定後再使用
- 磅的最大容量為5kg，即去皮前的重量。如果表面髒污，請使用含有酒精的軟紙巾或玻璃清潔劑清潔表面。不含肥皂或其他化學物質。遠離水、腐蝕性液體、高溫和極冷
- 該磅是高精度的測量裝置。切勿重敲或嘗試拆卸，請小心處理，以免在移動過程中掉落或斷裂
- 如果磅發生故障，請檢查電池。如有必要，請更換新的電池

技術參數

型號	電源	尺寸
IKS005001	1* 3V CR2032	14.5x20x1.6CM

小家電產品保修條款

敏寶有限公司（“本公司”）提供一年保修服務（由有效商戶發票上的購買日期起計算），保修期以後，客戶須按照維修部之修理報價支付一切費用。

- （一）客戶應按照產品使用說明書之指引使用產品，本公司對於任何因產品不適當使用或任何產品之故障，損壞或停頓而引致任何人士或財產上直接或間接損失及破壞概不負責。
- （二）客戶不可擅自刪改產品型號，機身編號或商戶發票內容。如發現者本公司將不向客戶提供保修服務。
- （三）由於人為損壞、錯誤使用，疏忽，擅自修理/改裝或產品用於非產品原本設計之用途，保修服務恕不提供。
- （四）本公司提供之保修服務不包括產品表面、機身、損耗性零件及配件。
- （五）客戶需自行將產品送往本公司之維修部，並於修妥後，於同一地點取回。經更換後之任何損壞零件，將歸本公司所有。
- （六）所有交到維修部之物品，在本公司發出通知取回後30天內仍不領回本公司將有權作出處理，由此所引致之任何損失，本公司概不負責。
- （七）保修條款如有任何更改，恕不另行通知。如有任何爭議，本公司保留最終決定權。

Important Safety Instructions

When using this appliance, basic precautions should always be followed, including the following:

Read all instructions before use.

1. This product is only for home use, not for outdoor use.
2. Only use the device for the intended purpose.
3. Do not use a damaged device.
4. Keep away from heat, direct sunlight, moisture (never immerse in liquids) and sharp edges.
5. Do not try to repair the device on your own. Always contact an authorized technician.
6. In order to ensure your children's safety, please keep all packaging (plastic bags, boxes, polystyrene etc.) out of their reach.
7. Children should be supervised at all time in order to ensure that they do not play with the device.

Product Specification Description

Specifications

- Capacity: 5g -5000g
- Division: 1g/0.05oz/1ml
- LCD display
- Low battery and overload indication
- Free switch within different units: g/oz/lb:oz/ml/fl:oz
- Powered by 1 x CR2032 battery

Button Description

UNIT ⏻ / TARE

“UNIT” Key: unit exchange

ON/TARE Key: switch on, switch off and tare function

HOW TO USE

Initial Use:

Remove all packaging.

- Key operation: unit switch
- Before using the scale for the first time, check the battery compartment and remove any plastic insulation strips or packaging that may be in place to prevent battery drainage during shipping/storage
- If you are replacing the batteries, make sure the positive and negative contacts are properly aligned



 
- Place the scale steadily on hard and flat surface. Clean table is best
- Press the ON/TARE button to switch on the scale and it will get ready for use when the LCD screen shows "0g" after full display
- Press the "UNIT" button and you can choose the unit prefer




- Put the container or other things you want to weigh on the platform of the scale and the weight will be showed on the screen



- Press the ON/TARE button to clear the weight of the things on the platform and the screen will show “Tare” and “0g”. Then put the food into the container or add more things on the platform and the weight of the stuff you add will be displayed on the screen



 - Continue to use the ON/TARE button and you can get respective weight of more things through repeating tare conveniently. And when all the stuff gets removed off the platform, the total weight will be showed on the screen



- Press the ON/TARE button to switch off the scale when the screen shows “0g” if no more weighing is needed or it will auto off if no further using within 2 minutes

Error Codes

1. Lo- Batteries are low, replace the batteries.



2. EEEE- maximum capacity exceed. This scale cannot be used to give measurements over 5000g.



Clean & Maintenance

- Please put the scale on hard and flat surface (clean flat table is best) and make sure it is steady before use
- The maximum capacity of the scale is 5kg, which is the weight before tare. Please use soft tissue with alcohol or glass cleaner to clean the surface if it is dirty. No soap or other chemicals. Keep it away from water, corrosive liquid, heat and extreme coldness
- The scale is high precision measuring device. Never knock it heavily or try to disassemble it and please handle it carefully to avoid dropping or breaking during moving
- Please check the battery if the scale malfunctions. Change a new one if necessary

Technical Specification

Model	Power Source	Product Size
IKS005001	1* 3V CR2032	14.5x20x1.6CM

SMALL HOME APPLIANCES WARRANTY TERMS & CONDITIONS

MAIN PLAN LIMITED (hereinafter called "the Company") offers one year warranty service to the product (commencing from the date of purchase invoice by the authorized dealers).

Services beyond the said warranty period will be charged according to the quotation from our Service Department.

1. Customer should follow the operating instruction in operating the product. The Company shall not be liable for any direct or indirect loss or damage to any person or property, howsoever caused arising from improper use, or any stoppage, breakdown or failure of the product.
2. The warranty service will not be offered if the model, serial number of the product or the invoice of the authorized dealers has been altered or effaced.
3. This warranty does not cover any damage or loss caused by man-made, misuse, neglect unauthorized repair / modification or use of the product for any purpose other than the original designed.
4. This warranty service does not include any surface, cabinet, consumptive parts and accessories.
5. Customer should be responsible to carry the product to our Service Department for rendering of service and collect back the product at the same location after repaired. Any defective part which has been replaced should become the property of the Company.
6. All articles left unclaimed by the customer within 30 days after notification will be disposed of at our own discretion and the Company shall not be liable or responsible to the customer for such articles or for any loss or damage whatsoever in such event.
7. All terms stated are subject to change without notice. In case of dispute, the Company reserves the right for final judgment and decision.



顧客服務中心 Customer Service Centre

電話 Telephone : (852) 2698 9280

WhatsApp : (852) 9732 0533
(只接受語音、短片、圖片及文字)
(Voice, video, image and text only)



地址 Address :

香港新界荃灣白田壩街23-29號長豐工業大廈東翼3樓
3/F, Cheung Fung Industrial Building East Wing, 23-29
Pak Tin Par Street, Tsuen Wan, N.T., Hong Kong

辦公時間 Office Hour :

星期一至五 Monday to Friday : 09:00 - 12:30 ; 14:00 - 17:30
星期六、日及公眾假期休息
Saturday, Sunday and public holiday closed